



UKIND CO., LTD.

(11493) A3, 4F, No. 58, Zhouzi St., Neihu Dist., Taipei City, Taiwan (R.O.C.)

TEL: 886-2-27978345; FAX: 886-2-27978834

www.uki.com.tw

MCT-I501 360°VR Panoramic Camera

Specifications

Customer :	
Customer Part NO :	
Maker Part No :	
Maker Part Name :	
Release Rev. :	
Date Submitted :	2017/5/24

Specification submitted			Please confirm your acceptance of this approve sheet return to send by post.
Specification <u> 1 </u>			
Others:			Customer's signature :
Approved	Checked	Prepared	
			DATE :

360°VR Panoramic Camera

I501



Thanks for choosing our 360° VR Panoramic camera – I501. Hope the camera can help you in the work of law enforcement

1. Features

High end Ambarella A12 Chipset

2pcs of 205° ultra-wide fish eye cameras

360° UHD quality, beauty has no boundary without any details missed

Real-time panorama preview & live streaming


VR immersive review mode / Change visual angel by smart phone (Rotating body) / Change visual by tablet (Slide)

Share with friends by social platform

2. Specification

DSP	Ambarella A12
Sensor	5M CMOS Sensor*2
Object Distance	0.5M--endless
Exposure	Still image/Video: Auto
White Balance	Still image/Video: Auto
External Interface	Micro USB terminal: TF socket
Default Output Pixel	5MP
Lens	dual F2.0
Angel	205 Degree*2
Sound	AAC
Photo Resolution	2560*1280 (Standard) / 3040*1520 (Optional)
Video Resolution	Dual Cam: 2560*1280 P30(Standard) / 3040*1520 P30(Optional)
Image File	JPEG
Video File	MP4, H.264
Microphones	1
Battery	1350mAh(120mins recording time)
WIFI	WIFI 802.11 b/g/n
RAM	2Gbit*2
External Memory Card	Support 128GB Max
Dimension/Weight	120mm*39mm*30mm/110g
Record Mode	Sphere(360degree)/Normal(180degree)
Accessories	Micro USB 2.0 Cable , Protection Cover, User Guide
Case Color	Gold, Silver, Pink, Black
Real Time Live	Support
Waterproof	IP54
App Operation System	App operation system

3. Key and Interface Introduction

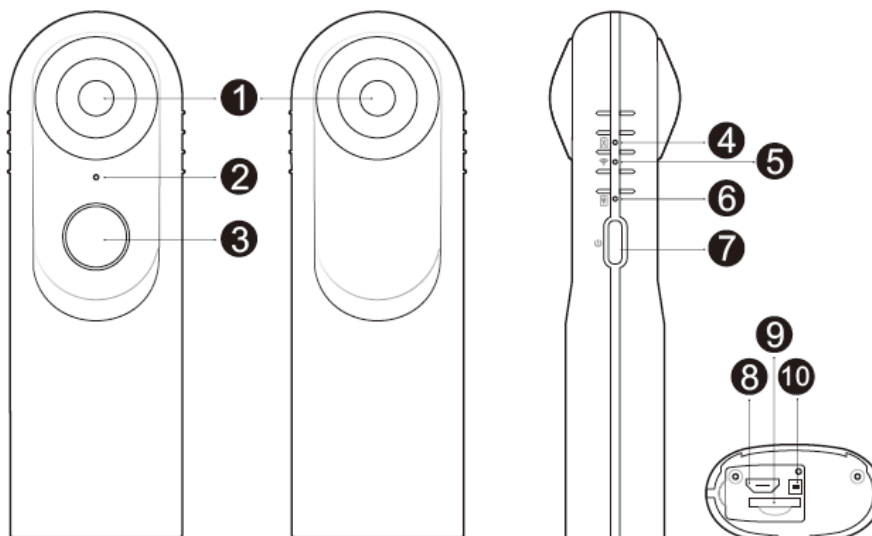

1. High Definition Fish-Eye Lens
2. Photograph/Video Recording Indicator LED
3. Photograph/Video Recording Key
4. Battery Indicator LED
5. WIFI Indicator LED
6. Charging Indicator LED
7. Power Key
8. USB Interface
9. TF Card Slot
10. Reset Key

4. Basic Operation Description

Power on/off

Long press the Power Key **7** for 2s to turn on the camera, with the Photograph/Video Recording Indicator LED **2** always on;

Long press the Power Key **7** again for 3s, with the Photograph/Video Recording Indicator LED **2** off, and the camera turns off (There is power on/off voice prompt! Before powering on the camera, please make sure to insert the TF card in the slot).

WIFI Connection

Short press the Power Key **7**, then the WIFI Indicator LED **5** blinks, and the WIFI is connected; Short press the Power Key again, then WIFI connection is off (When the camera is turned on, the WIFI indicator

LED ⑤ is always on and the WIFI is connected; If the WIFI Indicator LED ⑤ is off, it means that the WIFI is offline).

Photograph/Video Recording

① Photograph: Short press the Photograph/Video Recording Key ③ to take a photo (with indication sound).

② Video Recording: Long press the Photograph/Video Recording Key ③ for 2s to start the video recording (with indication sound), the Photograph/Video Recording LED ② blinking. Long press ③ again to stop the video recording (with indication sound) and the Photograph/Video Recording LED ② off.

Battery Charging

(Friendly Reminder: Please use 5V 1A adaptor for charging)

Connect the camera to the power by USB, and the camera is under the charging status.

① Charging in the camera shutdown mode, the Charging Indicator LED ⑥ turns red (The Charging Indicator LED ⑥ turns to green when fully charged).

② Charging in the camera turned-on mode, (the Charging Indicator LED ⑥ turns red. Turn to green when fully charged), and the Battery Indicator LED ④ blinks.

USB Storage Mode

When the camera is turned on, connect the camera with PC by USB, the camera comes to the USB storage mode, and the video cannot be previewed in real-time (Friendly Reminder : When the camera crashes down or cannot be switched off, please press the Reset Key ⑩ to reset the camera..).

5. APP Operation Guide

1. Download Camm360 in the APP Store. Scan the QR CODE as below





2. Power on the camera, and turn on the camera WIFI ;

3. Open the cell phone's WIFI and find "Camm360-XXXX" in the Wlan list and connect it. The initial password is 123456789.



Camm360

Enter main interface of the APP Camm360, there are functions: Preview, Photo Album, and Settings.






a. Click  , you can check the instruction manual.


b. When the WIFI is not connected, click the WIFI  logo again for reconnection.

Preview


Click preview, enter Photograph/Video Recording interface,  is the video recording key;  is the photograph key.

a. There are shooting modes switch LOGO in the top right corner.

b. Click it to switch on different shooting modes.  is normal mode;  is VR mode;  is Fish Eye Mode;  is the Asteroid mode;  is the crystal ball mode.

c.  is the video resolution selection, N (Low Resolution), F (Medium Resolution), SF (High Resolution);

 is the photo resolution selection, 5M or 9M;

 is video split time selection, 15s, 30s, or 300s.






 is the home key, click it and it will go back to the main interface.

Photo Album

 is the camera file folder;  is the cell phone file folder. Click download LOGO  in the video or photo of the camera folder, then the photo or video can be downloaded to the cell phone folder.

Afterwards click sharing LOGO  and the user can share them in the social network.

Settings

Click Settings, and the user can set Auto Power Off Time, Camera Calibration, Version, WIFI 2.4G/5G Switch, Memory Card Info, Format Card, Sound On/Off and Loud Speaker.

User's Instructions

Police Body Worn Camera - I826 is developed by Shenzhen Cammpo Technology Co., Ltd. We provide one year warranty and RMA service. In order to protect user's rights and avoid some unnecessary problems, please read below details:

1. Please send back below warranty card with order number, model, and problem clearly together with returned products during RMA service.
2. Any man-made damage such as: water, moisture, improper use or damage by no authorized organization as well as that over 1 year warranty, only paid service is available and the camera is not guaranteed to be recovered.
3. Serious man-made damage (such as water or fall down), a repair contract is necessary to sign.
4. Non man-made damage and still under 1 year's warranty, the camera can be changed, but not for the accessories